

Maintenance of Lugged Airshafts

Bladder replacement

Remove the drilled socket head screw from the flange end of the shaft.



Remove the retaining socket grub screws, and withdraw end plug using a slide hammer on a suitable stud.



Using a small screwdriver, prize each rubber lug from its' slot



Withdraw the old bladder by engaging the threaded centre of its end cap.

Introduce the replacement bladder, and replace the drilled Socket screw at the flange end of the shaft.



Carefully replace the rubber lugs in their slots, pressing the lipped sides gently home with the screwdriver blade.

Replace the end plug, and fix with the socket grub screws.



Replacement Bladders and Lugs should be included in Service Stock.

Quote MACHINE and AIRSHAFT Serial Numbers when ordering.

Please record Serial Numbers of Shafts Fitted to your machine here.

REWIND SHAFTS

.....
.....
.....
.....
.....
.....
.....
.....
.....

UNWIND SHAFTS

.....
.....
.....
.....
.....
.....

AIR CHUCKS

.....
.....
.....
.....
.....
.....
.....
.....